

Introduction

This installation guide provides instructions for installation, startup, and adjustment. To receive a copy of the instruction manual, contact your local Sales Office or view a copy at www.emersonprocess.com/regulators. For further information refer to: 627 Series Instruction Manual, form 5252, D101328X012.

P.E.D. Categories

This product may be used as a safety accessory with pressure equipment in the following Pressure Equipment Directive 97/23/EC categories. It may also be used outside of the Pressure Equipment Directive using sound engineering practice (SEP) per table below.

PRODUCT SIZE	CATEGORIES	FLUID TYPE
DN 20 to 25 (NPS 3/4 to 1)	SEP	1
DN 50 (NPS 2)	I, II	

Specifications

Available Constructions

Type 627: Direct-operated pressure reducing regulator equipped with a pitot tube for greater regulated capacities.

Type 627R: Type 627 with internal relief and with an open throat.

Type 627LR: Type 627R with light rate relief spring

Type 627M: Type 627 with a stem seal between the body outlet pressure and diaphragm case. Pressure is measured under the diaphragm through the 1/4 NPT downstream control line connection.

Type 627MR: Type 627M with internal relief.

Type 627H: Type 627 with a diaphragm limiter to deliver a higher outlet pressure.

Type 627HM: Type 627H with a stem seal between the body outlet pressure and diaphragm case. Pressure is measured under the diaphragm through two 1/4 NPT downstream control line connections.

Body Sizes and End Connection Styles⁽¹⁾

BODY SIZES	END CONNECTION STYLES	CONSTRUCTION AVAILABLE
NPS 3/4	NPT	All
NPS 1	NPT, CL150 RF, CL300 RF, CL600 RF, and Long Body	
NPS 2	NPT, CL150 RF, CL300 RF, CL600 RF, and Long Body	

Proof Test Pressure

All Pressure Retaining Components have been proof tested per Directive 97/23/EC - Annex 1, Section 7.4

Maximum Cold Working Pressure of Body Inlet⁽¹⁾⁽³⁾ (Body Rating)

NPT Steel: 138 bar (2000 psig)
Flanged Steel: 103 bar (1500 psig)
Ductile Iron: 69,0 bar (1000 psig)

Maximum Valve Disk Inlet Pressure Rating⁽¹⁾

Nylon (PA) Disk: 138 bar (2000 psig)
Nitrile (NBR) Disk: 69,0 bar (1000 psig)
Fluorocarbon (FKM) Disk: 20,7 bar (300 psig)

Maximum Operating Inlet and Outlet Pressure Ranges⁽¹⁾

See Table 1

Maximum Spring and Diaphragm Casing Pressure⁽¹⁾

See Table 2

Maximum Body Outlet Pressure⁽¹⁾⁽²⁾ (Types 627M, 627MR, and 627HM Only)

NPT Steel: 138 bar (2000 psig)
Flanged Steel: 103 bar (1500 psig)
Ductile Iron: 69,0 bar (1000 psig)

Temperature Capabilities

-29° to 82°C (-20° to 180°F)

Installation



WARNING

Only qualified personnel should install or service a regulator. Regulators should be installed, operated, and maintained in accordance with international and applicable codes and regulations, and manufacturer's instructions.

If the regulator vents fluid or a leak develops in the system, it indicates that service is required. Failure to take the regulator out of service immediately may create a hazardous condition.

Personal injury, equipment damage, or leakage due to escaping fluid or bursting of pressure-containing parts may result if this regulator is overpressured or is installed where service conditions could exceed the limits given in the Specifications section and Tables 1 and 2, or where conditions exceed any ratings of the adjacent piping or piping connections.

To avoid such injury or damage, provide pressure-relieving or pressure-limiting devices (as required by the appropriate code, regulation, or standard) to prevent service conditions from exceeding limits.

Additionally, physical damage to the regulator could result in personal injury and property damage due to escaping fluid. To avoid such injury and damage, install the regulator in a safe location.

1. The pressure/temperature limits in this Installation Guide and any applicable standard or code limitation should not be exceeded.
2. Types 627, 627H, 627R, and 627LR are limited by maximum diaphragm casing pressure.
3. Temperature may decrease these maximum pressures.



627 Series

Table 1. Maximum Inlet Pressures and Outlet Pressure Ranges

TYPES	OUTLET PRESSURE RANGE, SPRING PART NUMBER, AND COLOR	ORIFICE SIZE, mm (inches)	MAXIMUM INLET PRESSURE, BAR (psig) ⁽¹⁾		
			Nylon (PA) Disk	Nitrile (NBR) Disk	Fluorocarbon (FKM) Disk
627 and 627M ⁽³⁾	0,34 to 1,4 bar (5 ⁽²⁾ to 20 psig) 10B3076X012 Yellow	2,4 (3/32)	138 (2000)	69,0 (1000)	20,7 (300)
		3,2 (1/8)	69,0 (1000)	69,0 (1000)	20,7 (300)
		4,8 (3/16)	51,7 (750)	51,7 (750)	20,7 (300)
		6,4 (1/4)	34,5 (500)	34,5 (500)	20,7 (300)
		9,5 (3/8)	20,7 (300)	20,7 (300)	20,7 (300)
		13 (1/2)	17,2 (250)	17,2 (250)	20,7 (300)
	1,0 to 2,8 bar (15 to 40 psig) 10B3077X012 Green	2,4 (3/32)	138 (2000)	69,0 (1000)	20,7 (300)
		3,2 (1/8)	103 (1500)	69,0 (1000)	20,7 (300)
		4,8 (3/16)	69,0 (1000)	69,0 (1000)	20,7 (300)
		6,4 (1/4)	51,7 (750)	51,7 (750)	20,7 (300)
		9,5 (3/8)	34,5 (500)	34,5 (500)	20,7 (300)
		13 (1/2)	20,7 (300)	20,7 (300)	20,7 (300)
	2,4 to 5,5 bar (35 to 80 psig) 10B3078X012 Blue	2,4 (3/32)	138 (2000)	69,0 (1000)	20,7 (300)
		3,2 (1/8)	138 (2000)	69,0 (1000)	20,7 (300)
		4,8 (3/16)	121 (1750)	69,0 (1000)	20,7 (300)
		6,4 (1/4)	103 (1500)	69,0 (1000)	20,7 (300)
		9,5 (3/8)	69,0 (1000)	69,0 (1000)	20,7 (300)
		13 (1/2)	51,7 (750)	51,7 (750)	20,7 (300)
	4,8 to 10,3 bar (70 to 150 psig) 10B3079X012 Red	2,4 (3/32)	138 (2000)	69,0 (1000)	20,7 (300)
		3,2 (1/8)	138 (2000)	69,0 (1000)	20,7 (300)
		4,8 (3/16)	138 (2000)	69,0 (1000)	20,7 (300)
		6,4 (1/4)	121 (1750)	69,0 (1000)	20,7 (300)
		9,5 (3/8)	86,2 (1250)	69,0 (1000)	20,7 (300)
		13 (1/2)	51,7 (750)	51,7 (750)	20,7 (300)
627R and 627MR	0,34 to 1,4 bar (5 ⁽²⁾ to 20 psig) 10B3076X012 Yellow	2,4 (3/32)	138 (2000)	69,0 (1000)	20,7 (300)
		3,2 (1/8)	69,0 (1000)	69,0 (1000)	20,7 (300)
		4,8 (3/16)	51,7 (750)	51,7 (750)	20,7 (300)
		6,4 (1/4)	34,5 (500)	34,5 (500)	20,7 (300)
		9,5 (3/8)	20,7 (300)	20,7 (300)	20,7 (300)
		12,7 (1/2)	13,8 (200)	13,8 (200)	13,8 (200)
	1,0 to 2,8 bar (15 to 40 psig) 10B3077X012 Green	2,4 (3/32)	138 (2000)	69,0 (1000)	20,7 (300)
		3,2 (1/8)	103 (1500)	69,0 (1000)	20,7 (300)
		4,8 (3/16)	69,0 (1000)	69,0 (1000)	20,7 (300)
		6,4 (1/4)	51,7 (750)	51,7 (750)	20,7 (300)
		9,5 (3/8)	300 (20,7)	20,7 (300)	20,7 (300)
		13 (1/2)	200 (13,8)	13,8 (200)	20,7 (300)
	2,4 to 5,5 bar (35 to 80 psig) 10B3078X012 Blue	2,4 (3/32)	138 (2000)	69,0 (1000)	20,7 (300)
		3,2 (1/8)	121 (1750)	69,0 (1000)	20,7 (300)
		4,8 (3/16)	69,0 (1000)	69,0 (1000)	20,7 (300)
		6,4 (1/4)	51,7 (750)	51,7 (750)	20,7 (300)
		9,5 (3/8)	20,7 (300)	20,7 (300)	20,7 (300)
		13 (1/2)	13,8 (200)	13,8 (200)	20,7 (300)
	4,8 to 10,3 bar (70 to 150 psig) 10B3079X012 Red	2,4 (3/32)	138 (2000)	69,0 (1000)	20,7 (300)
		3,2 (1/8)	69,0 (1000)	69,0 (1000)	20,7 (300)
		4,8 (3/16)	34,5 (500)	34,5 (500)	20,7 (300)
		6,4 (1/4)	20,7 (300)	20,7 (300)	20,7 (300)
		9,5 (3/8)	13,8 (200)	13,8 (200)	13,8 (200)
		13 (1/2)	13,8 (200)	13,8 (200)	13,8 (200)
627LR	1,0 to 2,8 bar (15 to 40 psig) 10B3077X012 Green	2,4 (3/32)		69,0 (1000)	20,7 (300)
		3,2 (1/8)		69,0 (1000)	20,7 (300)
		4,8 (3/16)		51,7 (750)	20,7 (300)
		6,4 (1/4)		34,5 (500)	20,7 (300)
627H and 627MH ⁽³⁾	9,7 to 17,2 bar (140 to 250 psig) 10B3078X012 Blue	2,4 (3/32)	138 (2000)	69,0 (1000)	
		3,2 (1/8)	138 (2000)	69,0 (1000)	
		4,8 (3/16)	121 (1750)	69,0 (1000)	
		6,4 (1/4)	103 (1500)	69,0 (1000)	
		9,5 (3/8)	69,0 (1000)	20,7 (300)	
		13 (1/2)	51,7 (750)	13,8 (200)	
	16,5 to 34,5 bar (240 to 500 psig) 10B3079X012 Red	2,34 (3/32)	138 (2000)	69,0 (1000)	
		3,2 (1/8)	138 (2000)	69,0 (1000)	
		4,8 (3/16)	121 (1750)	69,0 (1000)	
		6,4 (1/4)	103 (1500)	69,0 (1000)	
		9,5 (3/8)	69,0 (1000)	69,0 (1000)	
		13 (1/2)	51,7 (750)	51,7 (750)	

1. For inlet pressure in excess of 69,0 bar (1000 psig), refer to the maximum body and disk pressure ratings in the Specifications section.

2. For pressure settings under 0,69 bar (10 psig), inlet pressure should be limited to approximately 6,90 bar (100 psig) so the setpoint adjustment can be obtained.

3. The unbalance forces change from the wide-open monitor mode to an active regulator mode such that the Type 627M or 627MH should have a 9,5 mm (3/8-inch) or larger orifice.

■ - Shaded areas indicate that Fluorocarbon (FKM) or Nylon (PA) disk material is not available.

Clean out all pipelines before installation of the regulator and check to be sure the regulator has not been damaged or has not collected foreign material during shipping. For threaded NPT bodies, apply pipe compound to the male pipe threads.

For flanged bodies, use suitable line gaskets and approved piping and bolting practices. Install the regulator in any position desired, unless otherwise specified, but be sure flow through the body is in the direction indicated by the arrow on the body.

Note

It is important that the regulator be installed so that the vent hole in the spring case is unobstructed at all times. For outdoor installations, the regulator should be located away from vehicular traffic and positioned so that water, ice, and other foreign materials cannot enter the spring case through the vent. Avoid placing the regulator beneath eaves or downspouts, and be sure it is above the probable snow level.

Overpressure Protection

The recommended pressure limitations are stamped on the regulator nameplate. Some type of overpressure protection is needed if the actual inlet pressure exceeds the maximum operating outlet pressure rating. Overpressure protection should also be provided if the regulator inlet pressure is greater than the safe working pressure of the downstream equipment.

Regulator operation below the maximum pressure limitations does not preclude the possibility of damage from external sources or debris in the line. The regulator should be inspected for damage after any overpressure condition.

Startup

The regulator is factory set at approximately the midpoint of the spring range or the pressure requested, so an initial adjustment may be required to give the desired results. With proper installation completed and relief valves properly adjusted, slowly open the upstream and downstream shutoff valves.

Adjustment

To change the outlet pressure, remove the closing cap or loosen the locknut and turn the adjusting screw clockwise to increase outlet pressure or counterclockwise to decrease pressure. Monitor the outlet pressure with a test gauge during the adjustment. Replace the closing cap or tighten the locknut to maintain the desired setting.

Taking Out of Service (Shutdown)



WARNING

To avoid personal injury resulting from sudden release of pressure, isolate the regulator from all pressure before attempting disassembly.

Table 2. Maximum Spring and Diaphragm Casing Pressure⁽¹⁾

MAXIMUM PRESSURE DESCRIPTION	DIAPHRAGM CASING MATERIAL	TYPE 627, BAR (psig)	TYPES 627R AND 627LR, BAR (psig)	TYPE 627M, BAR (psig)	TYPE 627MR, BAR (psig)	TYPES 627H AND 627HM, BAR (psig)
Maximum pressure to spring and diaphragm casings to prevent leak to atmosphere other than relief action (internal parts damage may occur).	Die cast aluminum	17,2 (250)	17,2 (250)	Not Available	Not Available	Not Available
	Ductile iron	17,2 (250)	17,2 (250)	17,2 (250)	Not Available	Not Available
	Steel	17,2 (250)	17,2 (250)	17,2 (250)	17,2 (250)	55,2 (800)
Maximum pressure to spring and diaphragm casings to prevent burst of casings during abnormal operation (leak to atmosphere and internal parts damage may occur).	Die cast aluminum	25,9 (375)	25,9 (375)	Not Available	Not Available	Not Available
	Ductile iron	32,1 (465)	32,1 (465)	32,1 (465)	32,1 (465)	Not Available
	Steel	103 (1500)	103 (1500)	103 (1500)	103 (1500)	103 (1500)
Maximum diaphragm casing overpressure (above setpoint) to prevent damage to internal parts.	All materials	4,1 (60)	8,3 (120)	4,1 (60)	8,3 (120)	8,3 (120)

1. If the spring case is pressurized, a metal adjusting screw cap is required. Contact your local Sales Office for details.

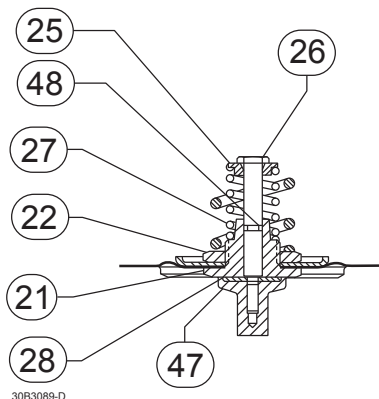


Figure 1. Type 627R Regulator Components

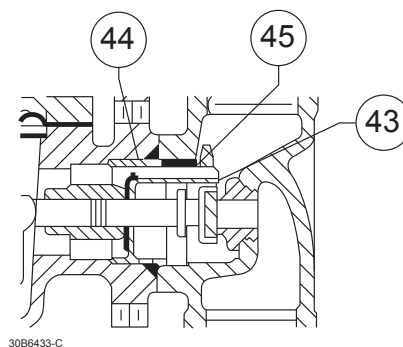


Figure 2. Type 627M Regulator Components

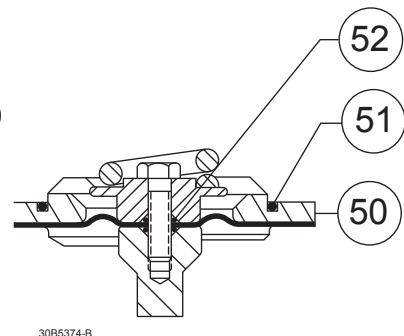



Figure 3. Type 627H Regulator Components

627 Series

Parts List

Key Description

1	Body
2	Orifice
3	Cap Screw (not shown)
4	Diaphragm Case O-ring (for Type 627, 627H, or 627R only)
5	Diaphragm Case
6	Boost Body (not for Type 627M, 627HM, or 627MR)
7	Stabilizer (for Types 627, 627H, 627R, and 627LR only)
8	Stem Guide (for Types 627, 627H, 627R, and 627LR only)
9	Disk Assembly (for all Orifice Sizes)
10	Stem
11	Stem O-ring
12	Stem Backup Ring
13	Hair Pin Clip
14	Drive Pin
15	Lever
16	Lever Retainer
17	Lever Pin
18	Lever Cap Screw
19	Pusher Post
21	Diaphragm Connector (for Type 627R or 627MR only)
22	Diaphragm Connector Nut (for Type 627 or 627MR only)
23	Diaphragm
24	Diaphragm Head
25	Relief Spring Seat (for Type 627R or 627MR only)
26	Guide Retainer (for Type 627R or 627MR only)
27	Relief Spring (for Type 627R or 627MR only)
28	Relief Spring O-ring (For Type 627R, 627LR, or 627MR only)
29	Spring Case
30	Screened Vent Assembly
31	Lower Spring Seat
32	Control Spring
33	Upper Spring Seat
34	Locknut
35	Adjusting Screw
36	Adjusting Screw Cap
37	Spring Case Cap Screw
43	Blocked Throat (for Type 627M, 627HM, or 627MR only)
44	Blocked Throat O-ring (For Type 627M, 627HM, or 627MR only)
45	Blocked Throat Backup Ring (for Type 627M, 627HM, or 627MR only)

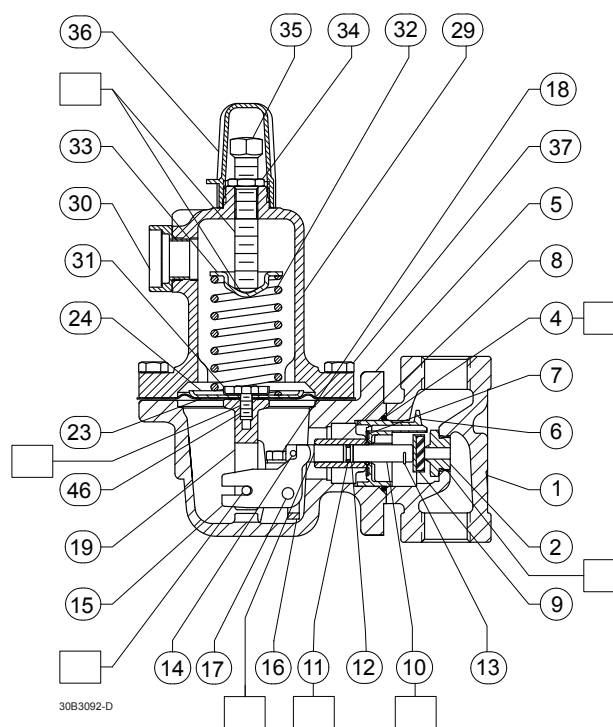

APPLY LUBRICANT
PARTS NOT SHOWN: 3

Figure 4. Type 627 Regulator Assembly

Key Description

46	Diaphragm Head Cap Screw
47	Relief Seal Retainer (for Type 627R or 627MR only)
48	Guide Retainer O-ring (for Type 627R, 627LR, or 627MR only)
49	Relief Indicator (for Type 627R or 627MR only)
50	Diaphragm Limiter (for Types 627H and 627HM only)
51	Diaphragm Limiter O-ring (for Types 627H and 627HM only)
52	Pusher Post O-ring (for Types 627H and 627HM only)

Industrial Regulators

Emerson Process Management Regulator Technologies, Inc.

USA - Headquarters
McKinney, Texas 75069-1872 USA
Tel: 1-800-558-5853
Outside U.S. 1-972-548-3574

Asia-Pacific
Shanghai, China 201206
Tel: +86 21 2892 9000

Europe
Bologna, Italy 40013
Tel: +39 051 4190611

Middle East and Africa
Dubai, United Arab Emirates
Tel: +971 4811 8100

Natural Gas Technologies

Emerson Process Management Regulator Technologies, Inc.

USA - Headquarters
McKinney, Texas 75069-1872 USA
Tel: 1-800-558-5853
Outside U.S. 1-972-548-3574

Asia-Pacific
Singapore, Singapore 128461
Tel: +65 6777 8211

Europe
Bologna, Italy 40013
Tel: +39 051 4190611
Gallardon, France 28320
Tel: +33 (0)2 37 33 47 00

TESCOM

Emerson Process Management Tescom Corporation

USA - Headquarters
Elk River, Minnesota 55330-2445 USA
Tel: 1-763-241-3238

Europe
Selmsdorf, Germany 23923
Tel: +49 (0) 38823 31 0

For further information visit www.emersonprocess.com/regulators

The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their prospective owners. Fisher is a mark owned by Fisher Controls, Inc., a business of Emerson Process Management.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

Emerson Process Management does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson Process Management product remains solely with the purchaser.



EMERSON
Process Management